# Wireless Keyboard for PS4 Controller



## **Quick Start Guide**

## **Product Introduction**

This PS4 controller wireless keyboard makes it easier for the players to chat with friends and relatives in PS4 & PS Vita platform. This device is easy to install ,take out and connect with any version of PS4 original controller as well, and provides convenient and useful functions like text type, Internet chat, and game playing.

### **Product Features**

- 1. To communicate with your friends conveniently by the voice chat and typing with this wireless controller.
- 2. Fits well with your PS4 controller, easy to install & simple to take off.
- 3. Easy to operate, good hand feeling.
- 4. The original style of the PS4 controller will not be destroyed when the wireless keyboard is fit on. This wireless keypad would be embedded perfectly with the PS4 controller.

## 

- 1 ENTER key
- 2 RIGHTSHIFTkey
- 3 SHIFT UP key
- 4 SHIFT DOWN key
- 5 Indicator light

amers

Digital

- 6 LEFTSHIFTkey
- 7 MICRO USB charging port
- 8 Audio Output socket
- 9 SPACE key
- **10** Bluetooth mode key
- 11 Power switch
- 12 BACKSPACE key
- 13 NUMBER/LETTER switch key
- 14 CAPS LOCK key
- **15/16** 28 Letter & Character input keys (area)
- 17 0-9 Number input keys (area)
- 18 Audio connector
- 19 Loudspeaker



Wireless Keyboard for PS4 Controller Quick Start Guide

## Setup - Bluetooth Pairing

- 1. Connect keypad to PS4 controller
- 2. Turn on PS4
- 3. Turn on **(III)** controller and keypad
- 4. Go to "Settings" on your PS4
- 5. Click "Devices"
- 6. Click "Bluetooth Devices"
- 7. Move within 6 feet (2 meters) of the PS4
- 8. Press the Bluetooth button on chatpad (for about 2 seconds), a blue light will start to blink near the charging port of the chatpad.
- 9. Look for "Bluetooth keyboard" to appear in Bluetooth Devices list and select it.
- Input code shown on screen to the keypad followed by the enter button
- 11. You have successfully completed pairing your Gamers Digital PS4 Chatpad! Enjoy!

## Setup - Audio Headset

- 1. Connect the headset to the 3.5mm port on the bottom of the keypad
- 2. Each time you press a key on the keypad you will hear an audio cue through the headset.

## Charging

- 1. When the LED flashes red, the keypad power is low, and it will need to be recharged
- 2. The red light will go off when the keypad is full recharged and ready for use.
- 3. Please recharge the batteries every 2-3 months during periods of non-use to protect the batteries performance.
- 4. If the bluetooth connection is broken, the keypad will automatically go into sleep mode. Press any key to automatically reconnect if the keypad is in range of the PS4, and it is on. If it does not automatically reconnect, try the keypad power button to turn it back on manually.

### **Electrical Parameter**

Charging voltage: DC 5V
Charginging current: 120MA

3. Quiescent current: ≤30uA 4. Bluetooth distance: ≤10 m 5. Bluetooth version: V3.0

### **Product Maintenance and Precautions**

- 1. The keyboard can be used only when the PS4 host is pairing successfully to the controller keyboard.
- 2. Do not knock on or beat the product strongly.
- 3. Liquid or small metal are not allowed to come into the product.
- 4. Do not use and store the product in a hot or humid environment.

## **Questions? Problems?**

email: support@gamersdigital.com



Wireless Keyboard for PS4 Controller Quick Start Guide



Wireless Keyboard for PS4 Controller Quick Start Guide